



One Click Fiber Cleaners For FC/ST/SC and LC/MU Connectors

Designed to specially work well with the female connectors, this instrument cleans the ferrule end faces removing Dust,oil and other debris without nicking or scratching the end face.

Part number	Picture	Application
EA9911 (SC,FC,ST)		Ferrule & Adapter 2.5mm 800+ times
EA9910 (LC,MU)		Ferrule & Adapter 1.25mm 800+ times

Features:

- Easy pushing motion engages connector and initiates cleaner
- Disposable with 800+ cleanings per unit
- Made from anti static resin
- Cleaning micro fibers are densely stranded and debris free
- Extendable tip reaches recessed connectors
- Cleaning system rotates 180 for a full sweep
- Audible click when engaged

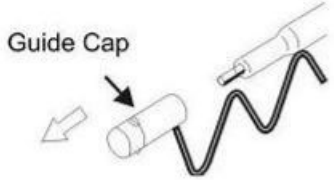
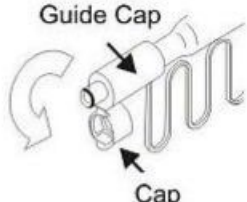
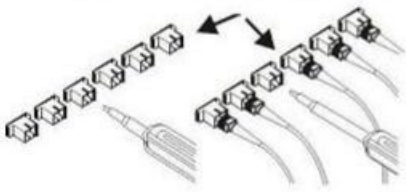
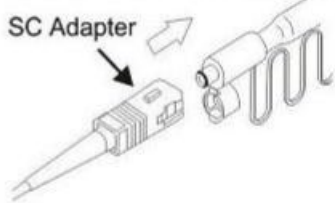
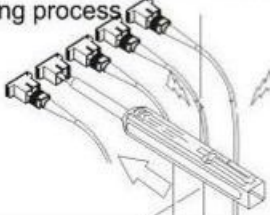
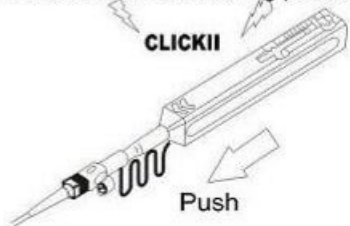
Applications:

- Fiber network panels and assemblies
- Outdoor FTTX applications
- Cable assembly production facility
- Testing laboratories

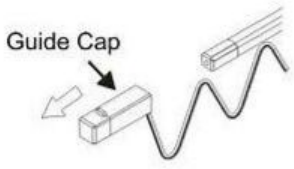
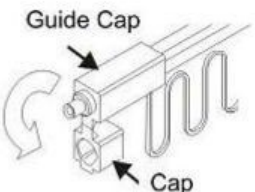
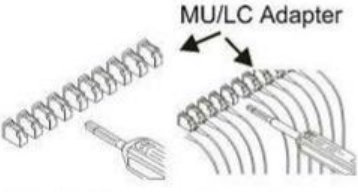
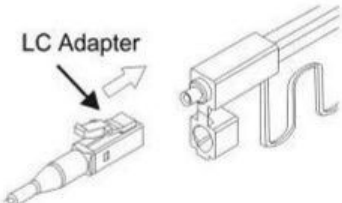

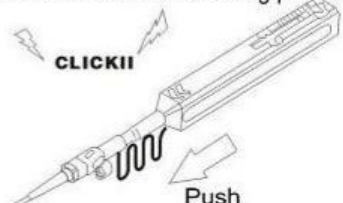
Specifications:

- 800+ cleaning per unit
- Cleans 2.5mm and 1.25mm ferrule connectors with PC, UPC and APC polishes
- Cleans connectors loaded in a bulkhead adapter and on cable assemblies

FC/SC/ST Application

<p>1. Remove Guide Cap from the device.</p>  <p>Guide Cap</p>	<p>1. Open the Cover on the Guide Cap.</p>  <p>Guide Cap</p> <p>Cap</p>
<p>2. Insert tip of cleaner into SC Adapter.</p>  <p>Standard Extended</p>	<p>2. Insert connector into the Guide Cap.</p>  <p>SC Adapter</p>
<p>3. Push the Outer Shell to start cleaning the SC connector. A "click" indicates end of cleaning process.</p> 	<p>3. Push the Outer Shell to start cleaning. A "click" indicates end of cleaning process.</p>  <p>CLICK!!</p> <p>Push</p>

MU/LC Application

<p>1. Remove Guide Cap from the device.</p>  <p>Guide Cap</p>	<p>1. Open the Cover on the Guide Cap.</p>  <p>Guide Cap</p> <p>Cap</p>
<p>2. Insert tip of cleaner into MU Adapter.</p>  <p>MU/LC Adapter</p> <p>Standard Extended</p>	<p>2. Insert connector into the Guide Cap.</p>  <p>LC Adapter</p>
<p>3. Push the Outer Shell to start cleaning. A "click" indicates end of cleaning process.</p>  <p>CLICK!!</p>	<p>3. Push the Outer Shell to start cleaning. A "click" indicates end of cleaning process.</p>  <p>CLICK!!</p> <p>Push</p>